

## EASY LOCK INFORMATION

### > Lock up speed / Unlock speed

- Low Speed Lock - 40km/h
- Low Speed Unlock - 35km/h
- Auto/High Speed Lock - 85km/h
- Auto/ High Speed Unlock - 75km/h

### > How do I switch on my Easy Lock?

High Speed/Auto Lock up is switched on by depressing the PWR Button  
 Low Speed Lock up is switched on by depressing the ECO button

### > How do I know Easy Lock up is on?


High Speed/Auto Lock up once depressed will illuminate the PWR light on the dash "Lock up will engage at set speed"  
 Low Speed lock up once depressed will illuminate ECO light on the dash "Lock up will engage at set speed"

### > Will PWR & ECO Button still work as it did previously?

PWR & ECO button will now be used to engage and disengage vehicle lock up. Button will not work as previously

### > How does this benefit my vehicle?

Lock up operation can aid in the reduction of transmission temperatures, improve fuel economy and help with general drivability of the vehicle

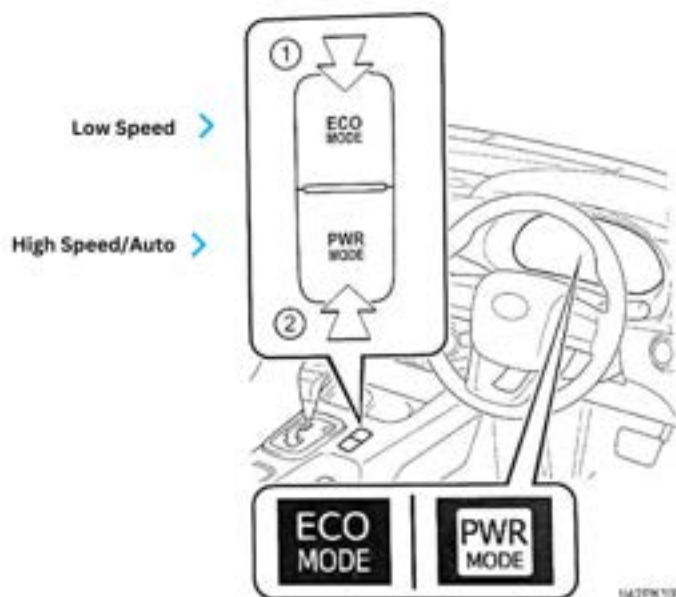

\*\* Lock up speeds may vary depending on tyre sizes & diff ratios \*\*  
 \*\* Scan gauges may not show correct on/off for lock up \*\*

UP TO  
**50% DROP**  
 IN TRANS TEMPS

# Just Autos

(07) 5476 0066 [www.justdieselpower.com.au](http://www.justdieselpower.com.au)  
 Nambour, Sunshine Coast - 11 Windsor Rd, Nambour QLD 4560