
ТОҮОТА ГЈАЗОО

MULTI MAP

60 FOLLOW OUR SOCIALS JUST AUTOS - MULTIMAP

Just Autos Cruise Control Switch

Your vehicle is now equipped with a Just Autos Multi Map. The Cruise control will operate all Map controls, + RES (UP, **B**) Map Up, - SET (DOWN, **E**) Map Down. To engage Map selection cruise control will need to be disengaged (Off, **C**), Selected Map will be shown in Tachometer (O rpm Immobiliser +, 1000rpm Idle up, 2000rpm Stock+, 3000rpm Tow, 4000rpm Power, 5000rpm Power+)

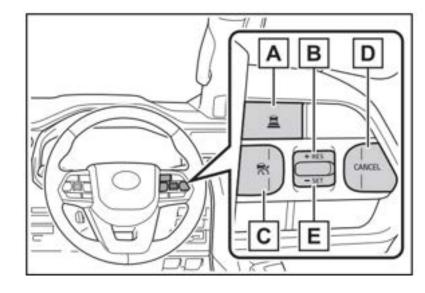

S/O. Security

Immobiliser setting, vehicle will crank but will not start. This function can only be accessed when the vehicle is stationary. Selecting this function during normal operation will revert to back to Tow Mode setting. To de select Security, Key on and hold up on cruise control stalk for 2 seconds or rotate the dial to selected map.

1. Idle up/Winch Mode

Will raise the RPM to 1500rpm depending on application. Once vehicle is driven away or a speed of over 5km/h is achieved, Vehicle will revert to Stock Mode. **** Just Autos recommends to not drive in winch mode ****

2. ECO

ECO Mode designed to be similar to factory with modifications to improve drivability

3. Tow Mode

Tow Mode is designed for maximum engine efficiency, to aid in the reduction of increased engine temperatures while under load. Tow Mode utilises a single turbo to reduce concern of surge when changing over to twin turbo under load

4. Power

Maximum output power levels

5. Power+

Launch Control, Lumpy idle. Power Levels are the same as Mode 4.





(07) 5476 0066 www.justdieselperformance.com.au Nambour, Sunshine Coast - 11 Windsor Rd, Nambour QLD 4560