# MULT **f o** Follow our socials JUST AUTOS - MULTI MA

## **Option1. Just Autos Cruise Control Switching**

Your vehicle is now equipped with a Just Autos Multi Map. The Cruise control stalk will operate all Map controls, + RES (UP) Map up, - SET (DOWN) Map Down. To engage Map selection cruise control will need to be disengaged (Off), Selected Map will be shown in Tachometer (0 rpm Immobiliser +, 1000rpm Idle up, 2000rpm Stock+, 3000rpm Tow, 4000rpm Power, 5000rpm Power+)

## **Option 2. Just Autos 6 Position Dial**

If fitted with Just Autos CAN switch(Position may vary in vehicle) These Maps can be applied by rotating the dial to desired position.

\*\* Both Options will display current map when selected on dash RPM \*\*

## S/O. Security

Immobiliser setting, vehicle will crank but will not start. This function can only be accessed when the vehicle is stationary. Selecting this function during normal operation will revert to back to Tow Mode setting. To de select Security, Ignition on and hold up on cruise control stalk for 2 seconds or rotate the dial to selected map.

# 1. Idle up/Winch Mode

Will raise the RPM to 1500rpm depending on application. Once vehicle is driven away or a speed of over 5km/h is achieved, Vehicle will revert to Stock Mode. \*\*\*\* Just Autos recommends to not drive in winch mode \*\*\*\*

# 2. ECO

ECO Mode designed to be similar to factory with modification to improve drivability

&

### 3. Tow Mode inc. Engine Brake

Tow Mode is designed for maximum engine efficiency, to aid in the reduction of increased engine temperatures while under load. Tow Mode has the ability to be used as an engine brake, Lower gear ratios with Higher RPM will have to be used \*\*\* Engine Brake on selected models \*\*\*\*

### 4. Power

Maximum output power levels

### 5. Power+

DIESEL

Launch Control, Lumpy idle. Power Levels are the same as Mode 4.

PERFORMANCE



Nambour, Sunshine Coast - 11 Windsor Rd, Nambour QLD 4560 DYNO TUNING SPECIALIST



