

Suitable for:

TOYOTA "SELECTED MODELS"

"This Product is an aftermarket upgrade developed by Just Autos and is not manufactured, endorsed or affiliated with Toyota Motor Corporation"

MULTI MAP



FOLLOW OUR SOCIALS

JUST AUTOS - MULTI MAP

Your vehicle is now equipped with a Just Autos Multi Map switch (Position may vary in vehicle) The Maps can be applied by rotating the dial to desired position.

0. Immobiliser

1. Valet Mode (2800rpm limit)
2. Idle up/Winch mode
3. Stock +
4. Tow Mode inc. Engine brake
5. Power
6. Power +

Full features listed below.

0. Immobiliser

Vehicle will crank, but will not start; this function can only be accessed when the vehicle is stationary. Selecting this function during normal operation will revert to back to Tow Mode setting.

1. Valet Mode

Valet mode can be used to limit vehicle to 2800rpm.

2. Idle up/Winch Mode

Will raise the RPM to 1500rpm depending on application. Once vehicle is driven away or a speed of over 5km/h is achieved, Vehicle will revert to Tow Mode.

**** Just Autos recommend to not drive in winch mode ****

3. Stock +

Vehicle Factory file with small modification to file to improve drivability

4. Tow Mode inc.


Engine Brake – Tow Mode is designed for maximum engine efficiency, to aid in the reduction of increased engine temperatures while under load. Tow Mode has the ability to be used as an engine brake, Lower gear ratios with Higher RPM will have to be used

5. Power

Maximum output power

6. Power+

Launch Control, Lumpy idle & High Pedal sensitivity, Power Levels are the same as Mode 5.

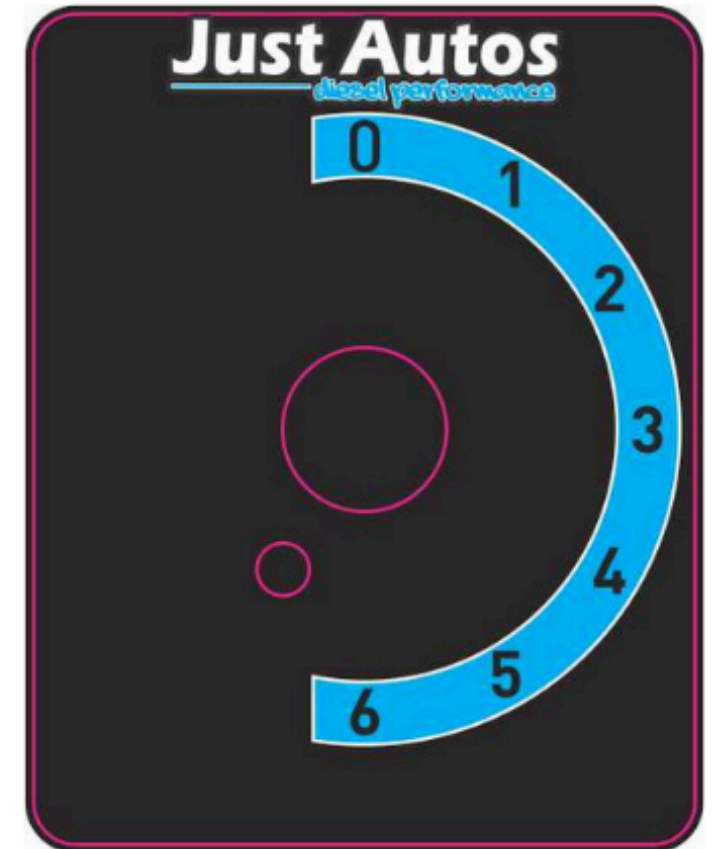

6 MAPS

TO CHOOSE FROM

Just Autos®

(07) 5476 0066 www.justdieselpowerperformance.com.au
Nambour, Sunshine Coast - 11 Windsor Rd, Nambour QLD 4560

D I E S E L P E R F O R M A N C E & D Y N O T U N I N G S P E C I A L I S T S