

TOYOTA LANDCRUISER VDJ70

**VDJ70*
FAN KIT**



FOLLOW OUR SOCIALS

DISCOVER THE POWER OF
UNLEASHED
PERFORMANCE



**REDUCE
YOUR
INTAKE TEMPS**

Just Autos

(07)5476 0066 www.justdieselperformance.com.au
Nambour, Sunshine Coast - 11 Windsor Rd, Nambour QLD 4560

D I E S E L P E R F O R M A N C E & D Y N O T U N I N G S P E C I A L I S T S

Part Number - INT-JAFAN

Minimum Tooling Required



- > Phillips screw driver
- > Small flat blade screw driver
- > Side Cutters
- > Drive ratchet (3/8)
- > 10mm Socket (3/8)
- > 10mm Spanner
- > 12mm Spanner
- > 5mm Allen Key

Intercooler Fan Kit Contents

- > Fan Assembly
- > Adjustable Realy Mount
- > Adjustable Mount Bracket
- > Fasteners
 - 4 x M6 Hex Bolt & Washer*
 - 2 x Spacers*
 - 2 x Counter Sunk Screws*
- > Wiring Harness




> Remove & dispose of intercooler top trim panel

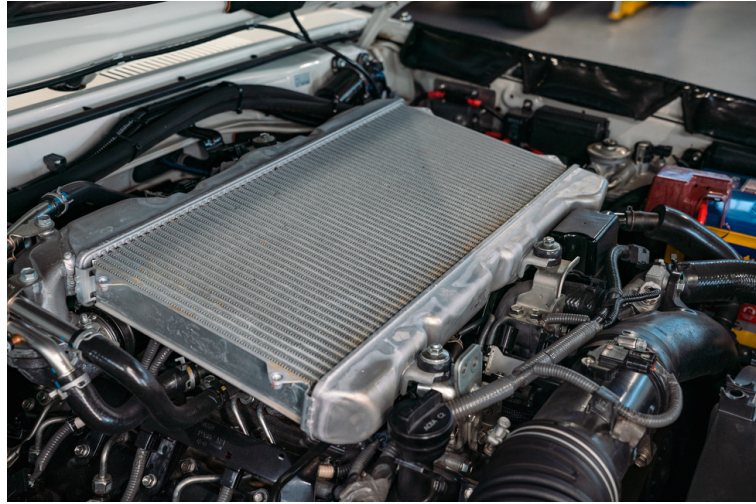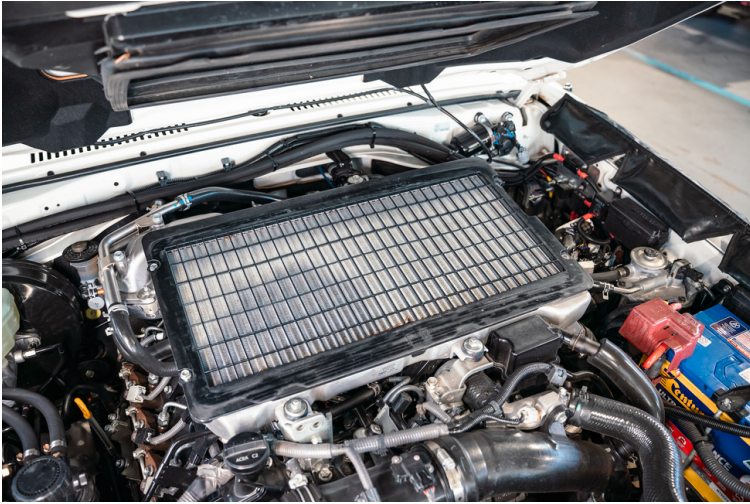

> Remove fan kit from packaging - Remove security ties




> Locate all parts and harness
*Note - Highlighted part is NOT used for VDJ70**

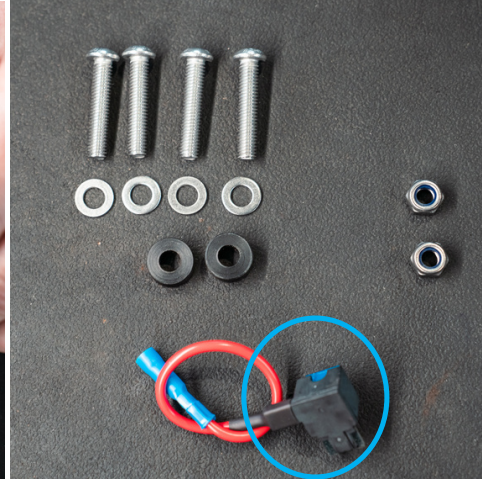


- Locate adjustable bracket and adjustable relay mount



- Fit adjustable bracket and locate a suitable position to allow fitment - Apply counter sunk fasteners to bracket

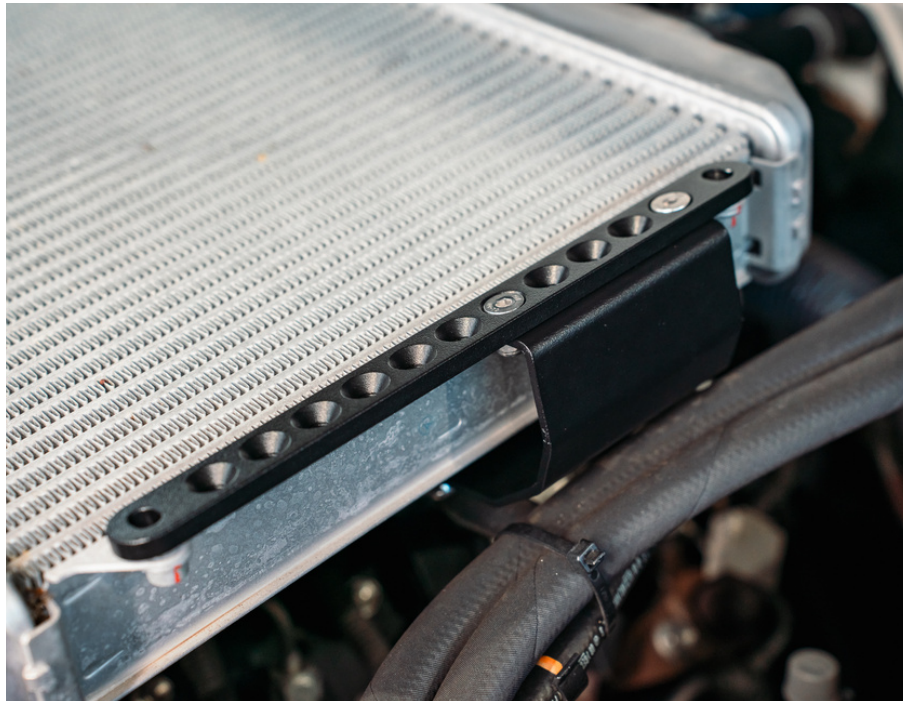

- > Install adjustable bracket as spacer on passenger side (LHS)

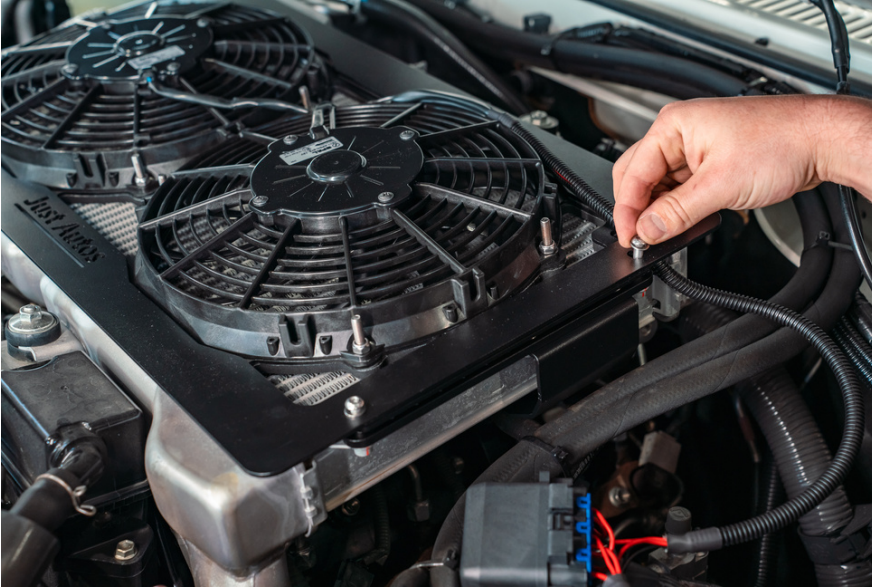


- > Install spacers to drivers side (RHS)




> Install supplied fasteners with included washers




> Disconnect negative terminal from battery

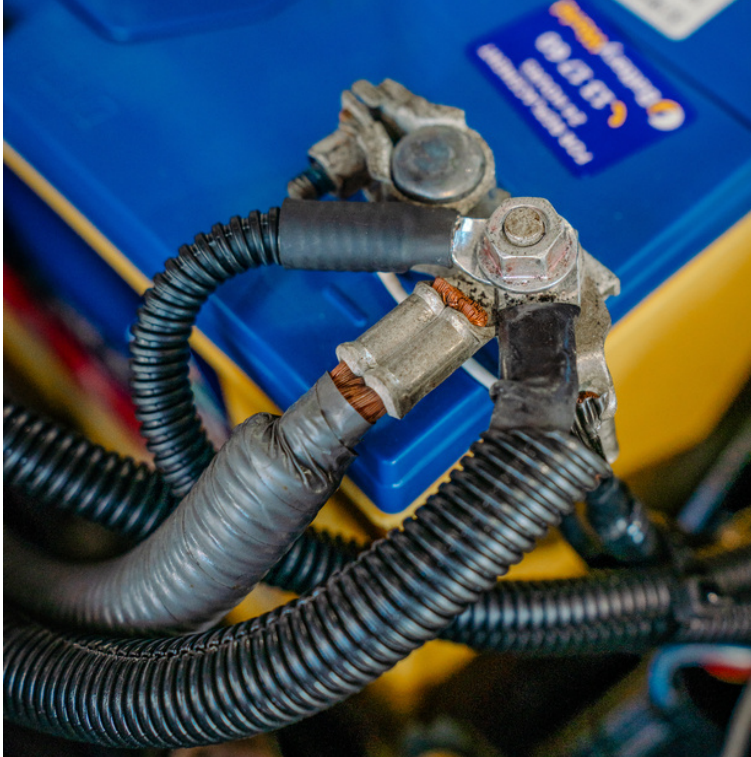


- Begin to route harness throughout engine bay using the OEM harness or existing aftermarket loom as a guide

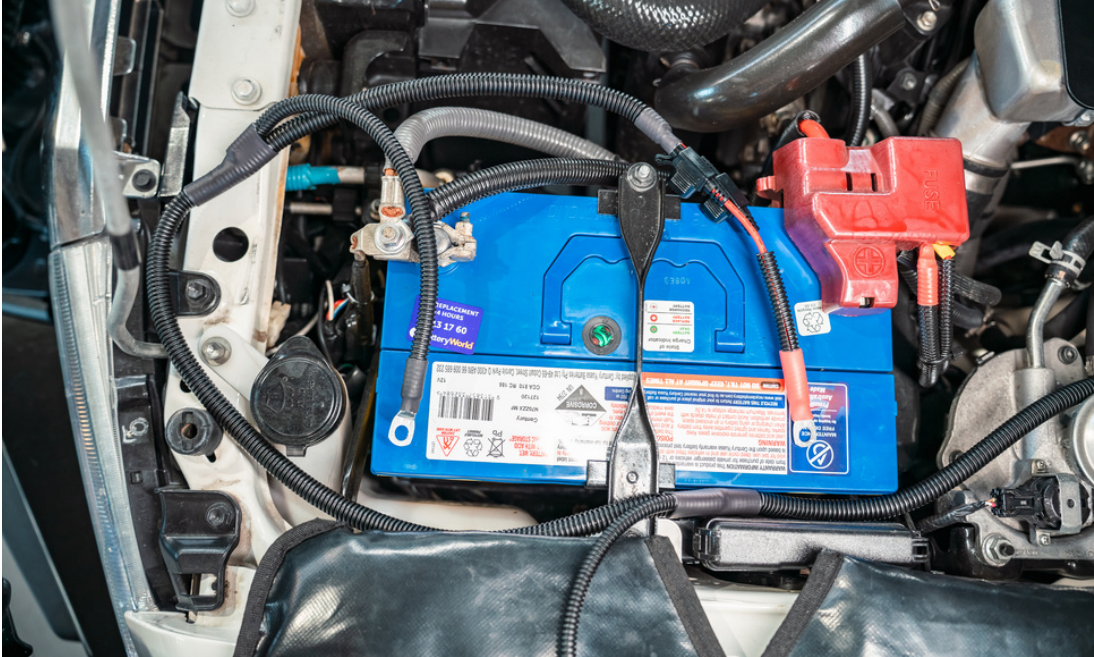

- Connect Deutsch connector

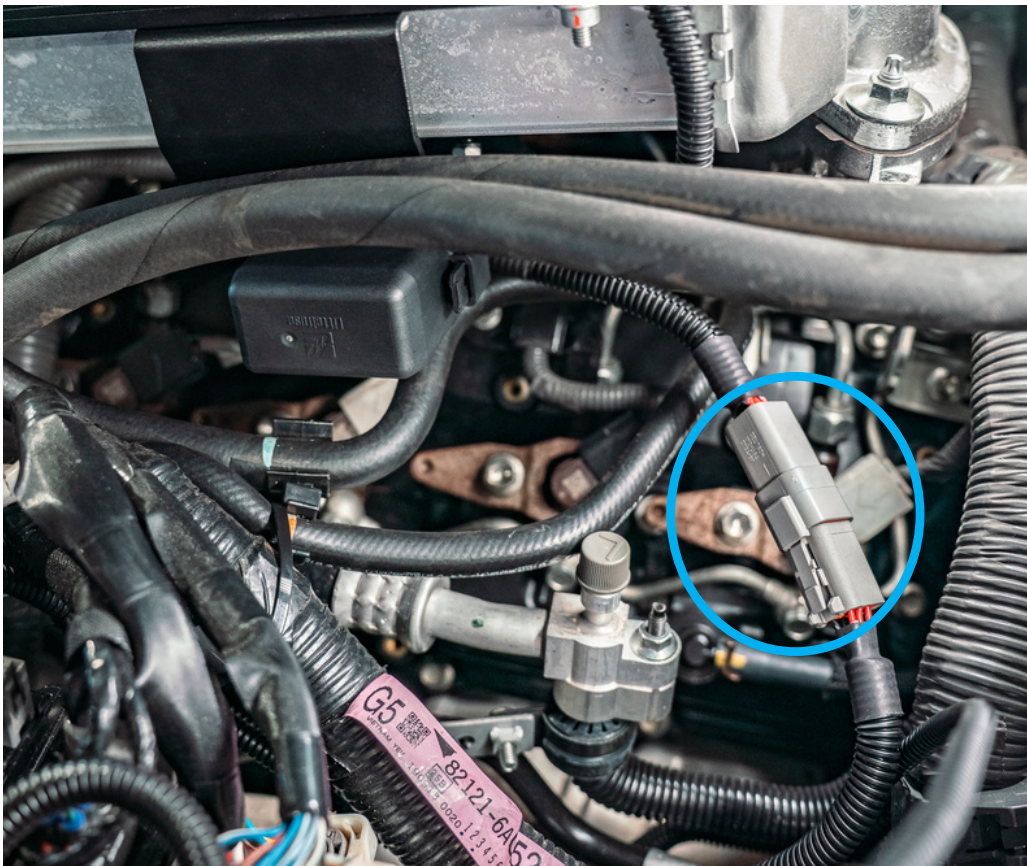

- > Route remaining harness along firewall using the OEM harness or existing aftermarket loom as a guide. With terminated end directing toward OEM accessory box

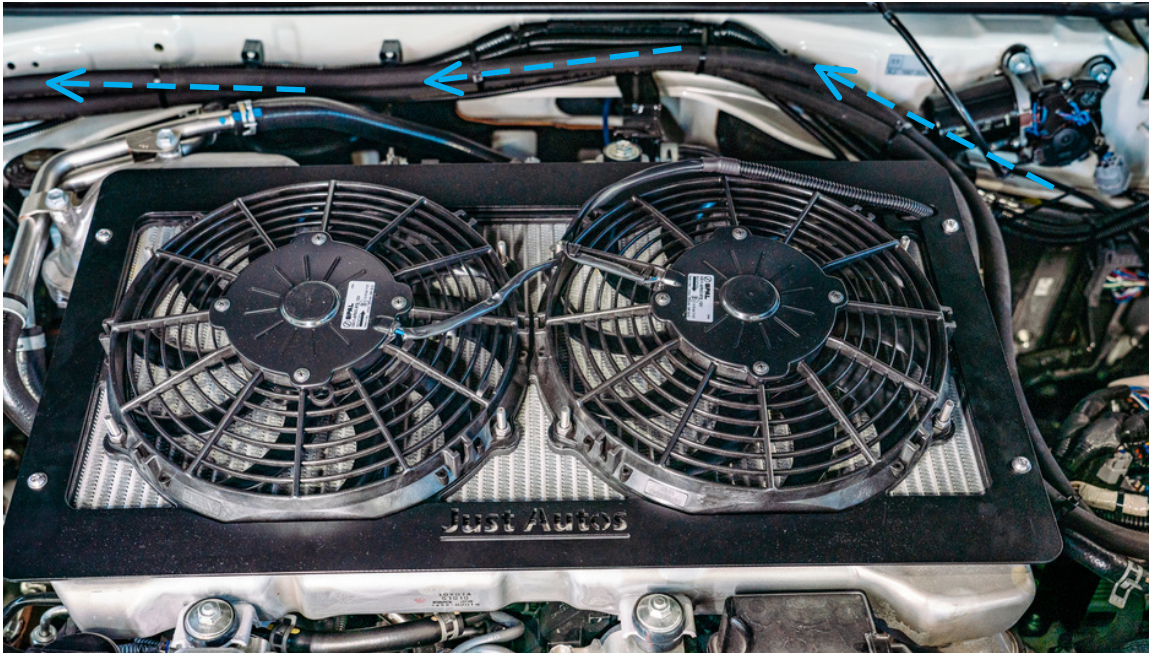

- > Connect terminal to accessory post in auxiliary power box. Note - Power cable gets routed from underside of auxiliary power box. PIN location on inside of box lid



- > Connect both remaining positive and negative cables to battery terminals
Reconnect negative battery terminal to battery post.



- > Turn vehicle ignition on to accessories - Fans should start to cycle.
Turn vehicle ignition off - Fans should cycle off.

Fan Kit Installation Is Complete



Thank you for choosing to purchase the Just Auto's Intercooler Fan Kit and taking the time to install it.

We appreciate your trust in our brand and the time we have put into the re- search and development of all the products for the VDJ70* platform. If you have any questions or feed back from the installation process we would be more than happy to hear from you .

Myself and the team wish you all the best and look forward to speaking to you in the future.

Matt Smith

Matt Smith
Just Autos Director

Just Autos

Just Autos